



Lift and Tow Z-Bar Parts List

ITEM	PART NUMBER	DESCRIPTION
1	LT-147	Z-Bar w/ Headplates and Arms. No Cylinders
2	LT-142	Z-Bar Bottom Head Plate
3	LT-436	Middle Arm Washer
4	LT-401	Z-Bar Spring
5	LT-148	Left Middle Arm
6	LT-149	Right Middle Arm
7	LT-411	Shoulder Bronze Bushing 1" x 1 1/4" x 3"
8	LT-410	Elbow Bronze Bushing 0.75" x 1" x 2"
9	LT-138	Z-Bar Elbow Pin
10	LT-139	Z-Bar Shoulder Pin
11	LT-140	Z-Bar Cylinder Pin
12	LT-116	Left End Arm
13	LT-117	Right End Arm
14	LT-406	ANSI B18.3 - 3/8-14 UNC x 0.75
15	LT-135	Z-Bar Main 2.5 Inch Pin
16	LT-403	Z-Bar Main 2.5 Inch Pin Nut
17	LT-284	Z-Bar Cylinder
18	LT-446	ANSI B18.2.1 - 5/8-11 UNC - 4.5
19	LT-234	Z-Bar Lock Block w/ Fittings
20	LT-285	Z-Bar Cylinder 90 Degree Male Fitting
21	LT-287	Z-Bar Cylinder 90 Degree Female Fitting
22	LT-237	Single Bend Metal Tubing
23	LT-404	ANSI B18.2.1 - 1/4-20 UNC - 1.5
24	LT-423	5/8 Hex Nut
25	LT-428	Zerk (Grease) Fitting
26	LT-238	Triple Bend Steel Tubing
27	LT-242	Z-Bar 9.5 Inch Hydraulic Hose
28	LT-241	Z-Bar 16.5 Inch Hydraulic Hose
29	LT-447	ANSI B18.3 - 3/8-18 UNC 3/8
30	LT-143	Z-Bar Top Head Plate
31	LT-417	Chain Hook

**Color is for reference to identify individual parts only.
All fabricated parts are powder coated black.**